

1. POLE ASSEMBLY

Insert push buttons into top and middle pole sections. Make sure buttons protrude through holes. See Figure 1, Detail A.

Assemble the pole sections as follows:

- A. Insert the top pole section into the middle pole and the middle pole into the bottom pole by aligning the holes and push buttons. See Figure 1.
- B. Depress each push button and slide poles together until the button snaps through the hole in its mating pole section.

TIP: Don't put plastic caps on top pole sections until after net has been attached.

TIP: Don't use pole anchors on poles until step 5 of instructions is begun.

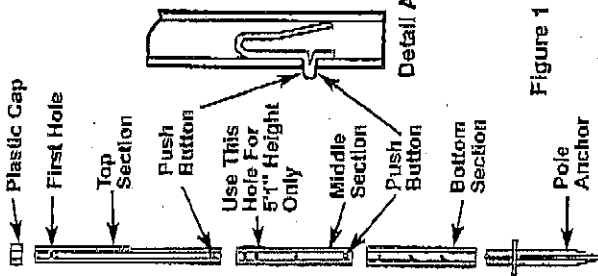


Figure 1

2. NET ATTACHMENT

Slide net sleeve over top section of assembled pole making sure net top with grommet is at top end of pole. See Figure 2. Plastic cap can now be placed on top pole.

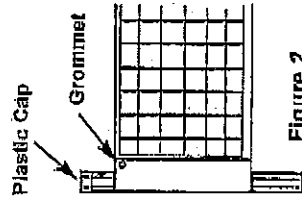


Figure 2

5. NET SET UP

Stretch assembled net and poles across playing area until net is taught. Press pole anchors into ground where poles touch ground. Slip poles onto anchors. Holding poles in vertical position, press guide rope stakes into ground at 45° angle, 3' to 5' from pole and 3' to 5' apart. Make sure hooks on stakes are facing away from poles. See figure 4.

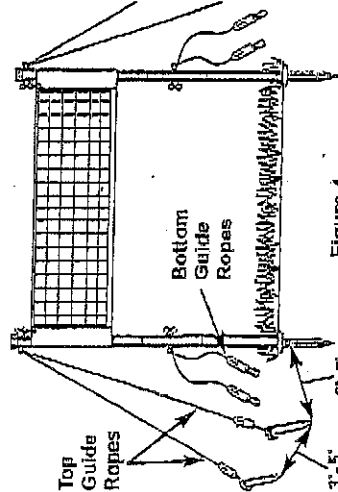


Figure 4

6. BOTTOM GUIDE ROPE SET UP

Make loop on bottom guide rope tension clip large enough to slip over stake already in ground. Make sure guide rope loop is placed under stake hook as shown in Figure 5.

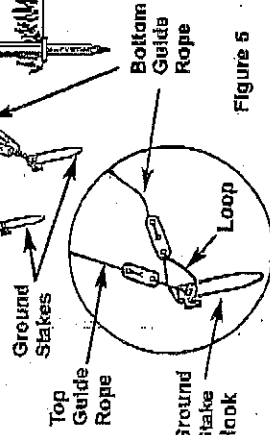


Figure 5

TIP: After net is completely assembled, you can adjust net tension by sliding tension clips up or down along guide ropes

3. TOP GUIDE ROPE ATTACHMENT

Insert eyebolt, with long guide rope and pre-attached tension clips and stakes, through hole in top pole section as shown in Figure 3. Secure with wingnut with attached "S" hook. Tighten tension clip until "S" hook is positioned at bottom of wingnut as shown in Detail B. Pull net upward and insert "S" hook through grommet in net sleeve.

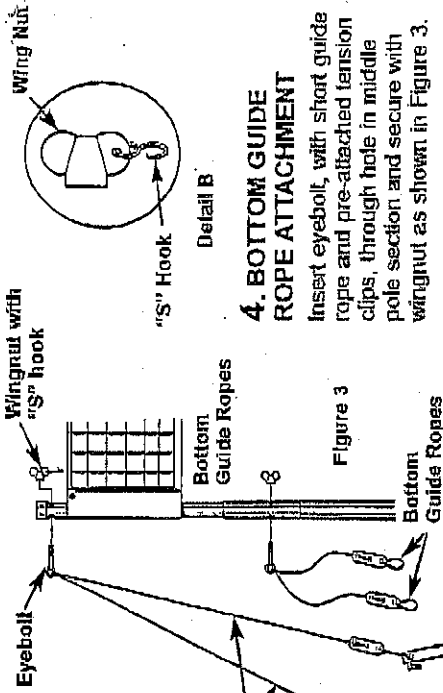


Figure 3

7. NET LENGTH ADJUSTMENT

To adjust net length to 27 or 21 feet, attach supplied metal clips to top and bottom metal grommets on net sleeve and the other ends to metal grommets on top and bottom of net binding (see Fig. 7).

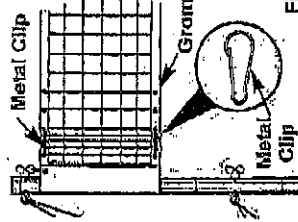


Figure 7

Then bunch up remaining net material and use self-stick straps to pole secure to pole (see Fig. 8).


Figure 8

8. NET HEIGHT ADJUSTMENT

The height of the net can be adjusted by depressing the pushbuttons on the middle pole and raising or lowering the poles until the pushbuttons are aligned with the holes in the bottom sections. Note: If 5'1" height is desired, remove bottom poles, guide ropes and anchors, as they are not used. Use second hole for pushbutton in middle section (new bottom pole) (see Fig. 1). Place larger caps under new bottom pole and set up as before. Caps replace anchors on ground.

9. COURT MARKING KIT

Lay out yellow rope as per diagram. Slip metal "U" stake in hole at bottom of each flag and secure rope to metal stakes with flags in an upright position at each corner.

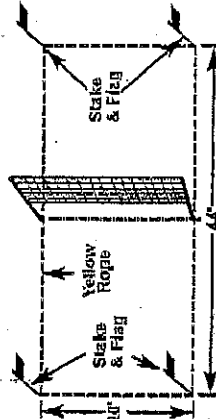

10. BALL HOLDER

The included ball holder is opened by sliding the push button adjustment clip forward the end of the string. Stretch the netting open, place the ball inside the net and secure by sliding the pushbutton adjustment toward the net. Tie the ball holder to the carry bag or carry as is.

Hailex Products are Distributed by:

Regent Sports Corp., 45 Rarick Road, Hauppauge, New York 11788
Visit our web site at www.regent-halex.com to register for warranty service and be eligible for special offers.